



*Microsized*

# Lap Dog Trainer

Advanced features help develop good household habits quickly



GREAT FOR DOGS BIG AND SMALL



## *Microsized* Lap Dog Trainer

Advanced features help develop good behavior quickly in dogs big and small.

This featherweight collar receiver rests easily on your dog's neck. Innovative in-set contact probes precisely fit the small necks of toy and other small "lap dog" breeds. Optional wide set probes for larger dogs are included. This system also features tone-only training options, for greater training flexibility.



### System Includes:

- Miniature, featherweight collar receiver – smallest on the market today
- Compact, lightweight, six-button transmitter
- Options for GOOD and BAD tone-only training – no stimulation required
- All batteries included
- FREE Professional Training Support
- Optional in-set contact probes for thinner neck sizes
- 4 levels of stimulation, instantly available
- Range to 200 feet
- Test light
- *Introduction to Dog Training* DVD
- Limited Lifetime Warranty



**WE CARE. CALL US FIRST. 1-800-826-5527**

### LIMITED LIFETIME WARRANTY

Invisible Technologies warrants to the original retail purchaser, that Innotek brand products will be free from defects in material and workmanship, under normal use, for a period of one year from the date of the original retail purchase. This Limited Warranty excludes: accidental damage due to dog chews; lightning damage where an INNOTEK lightning protection component is not in use (in-ground pet fencing systems); or neglect, alteration and misuse.

Invisible Technologies offers several product exchange options during the warranty period. If service is required, call 1-800-826-5527 to discuss the service plan that best serves your needs. Costs are dependent on the processing time and the desired shipping options. Please do not return this product to your retailer.

After one year from date of original retail purchase, we will repair, replace or upgrade your product at a fixed rate based on the component.

 
Invisible Technologies, Inc., shall not be liable or responsible for any incidental or consequential damages resulting from the use of the product or caused by any defect, failure or malfunction of the product, whether a claim is based upon warranty, contract, negligence or otherwise.

**Extended wear may cause skin irritation. Refer to owner's guide.**

# Quick Start Guide

## Step 1


### Fit Collar on Dog

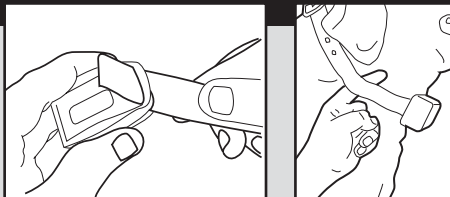

Thread the included collar strap through the channels on the receiver. With the collar turned OFF, place on dog and adjust to fit. The collar fit should be snug, yet loose enough to allow one finger to fit between the strap and the dog's neck. Fit is important because a loose collar may cause inconsistent performance. It's okay to trim any excess strap length.

## Step 2
 
### Power Up

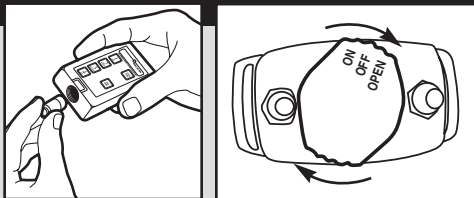


**Transmitter:** Insert 12v alkaline battery in the transmitter positive (+) side out. Replace metal cap.

**Receiver:** Your receiver comes ready to go with batteries installed. Activate the collar by turning the receiver's battery cover clockwise to the ON position.

## Step 3
 
### Match Components

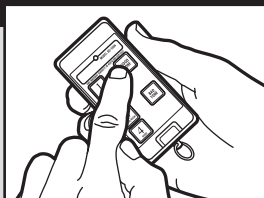

Press GOOD Tone button on the transmitter within 30 seconds of turning ON the receiver. The components now work together.

You may wish to set tone mode before working with your dog. See "Setting/Changing the tone mode."

When not in use, be sure to turn the receiver OF to extend battery life.

# SD-70 Lap Dog Trainer

## Understanding the Transmitter

The handheld device signals the collar receiver to produce stimulation and/or tone. The transmitter is water-resistant and should not be immersed in water or placed in a dishwasher.

### Transmitter Buttons:

**1-LOW to 4-HIGH.** – Select any of 4 stimulation levels instantly. We recommend that you always start training your dog with the lowest stimulation, and increase to a higher level if necessary. You will know when you've reached the right level when your dog responds by twitching his head, neck or shoulders or by perking up his ears. If the dog vocalizes, you need to go to a lower level.

You control the length of the stimulation by how long you press the button. For a short stimulation, press and release the button. For a longer stimulation, hold the button down. A maximum of 10 seconds may be applied before the safety feature to prevent over-correction engages. After 10 seconds, stimulation will be locked out for another 10 seconds. During the lock-out period a solid tone will sound.

### GOOD Tone Button

Simply press the GOOD tone button when your dog does something good and follow up immediately with a favorite treat and plenty of praise. Your dog will quickly learn to associate the GOOD tone with proper behavior.

### BAD Tone Button

The BAD tone followed by the stimulation is used for inappropriate behavior. Your dog will quickly learn to associate the BAD tone with inappropriate behavior. You can then use the BAD tone alone to discourage misbehaviors.

**PROGRAM** – used in tandem with buttons on the transmitter face to change ID Codes or set tone-with-correction options.

Your transmitter has an LED light:

- Pulsating green light – unit is transmitting
- Pulsating red light – low battery

### Changing the ID Code

The SD-70 offers 2,048 ID codes in case you experience problems from other nearby training units. To change codes:

- Turn the collar off.
- Press and hold the PROGRAM button on the back of the transmitter.
- Continue pressing PROGRAM, while pressing 1-LOW on the face of the transmitter.
- Release only the PROGRAM button, while continuing to press 1-LOW.
- When the LED ceases flashing red-green, release 1-LOW.

- Rematch the components as shown in Quick Start Step 2.

## Setting/Changing the Tone Mode

You can set the SD-70 to deliver the BAD tone automatically when you push a stimulation button. Three settings are possible – tone with the stimulation, tone followed by delayed stimulation or stimulation only.

1. Press and hold the PROGRAM button on the back of the transmitter.
2. Press and hold one of the following to select the tone option:
  - BUTTON 2 for tone ON with stimulation
  - BUTTON 3 for tone OFF with stimulation
  - BUTTON 4 for tone with a one-second delay before stimulation
3. While continuing to hold BUTTON 2, 3, or 4, release the PROGRAM button. The transmitter light will stay solid for a couple of seconds, and then go out.
4. As soon as the solid light goes out, release BUTTON 2, 3, or 4.

## Understanding the Receiver

The collar receiver produces stimulation and/or tone. The receiver is water-resistant and should not be immersed in water or placed in a dishwasher.

 
## Testing the Receiver

You may wish to test the collar from time to time. To test:

- Hold the test light provided across the receiver's posts
- Press a stimulation button 1-LOW to 4-HIGH.
- Test light will illuminate.
- The intensity of the test light will increase as the level increases.

## Replacing Batteries

To replace batteries, twist the battery cover counter-clockwise, to the OPEN position. Lift the cap out, remove old batteries and insert new batteries with positive (+) side down toward the battery cap lid.

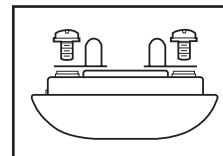

### Changing Posts

Your SD-70 receiver comes with innovative inset probes designed to precisely fit the smaller necks of toy and lap-dog breeds.

To change the posts to the in-set design, simply remove the contact posts, then assemble the in-set posts using the Phillips head screws provided (see illustration). Be sure that the post base lifts up and away from the battery cap on/off switch.

### Replacement batteries:

Your SD-70 transmitter uses a 12-volt alkaline battery, and the receiver uses two 3-volt Lithium coin cell batteries (CR-2032). These are commonly available where you bought your training system, or where batteries are sold.

### Compliance with U.S. Telecommunications Regulations

This Innotek Remote Training System is designed to meet requirements set forth by United States country telecommunications authorities. Note that in some countries, use may be limited due to national frequency planning requirements. The user is responsible for respecting those rules.

### Training Tips

Watch the included DVD to get the basics for training your dog properly with a remote trainer.

Always praise your dog for good behavior!

Teach him what the commands mean before introducing the collar as a reinforcement tool.

Keep training sessions brief, about ten minutes of training and then a rest or play period of at least equal length.

Dogs learn through repetition. You may have better training success if you can elicit an undesired behavior when you can anticipate it. For example, if the dog misbehaves and jumps on visitors, have someone come in and out of the front door several times over a half-hour period. You'll be expecting it and will be ready to teach your dog the right behavior.

Always end a training session on a positive note. Let the dog have success. This way he'll look forward to the next session.

Training should be fun for both you and your dog. Never train when you are angry. If you get frustrated during training, stop and come back to it later. Your dog will learn better when you are both relaxed.

We recommend your dog be at least six months old before starting a remote training program. You will be asking your dog to concentrate for periods of time and to remember what you have taught. Young puppies do not necessarily have the required mental development or attention span for these activities.

The goal of training is to condition your dog to respond to your verbal command under all situations. You should plan on using the collar for at least four months. A good rule is, once started with a remote trainer, to regularly have the collar on when you take the dog out. This will ensure that he will always be imprinted with the correct response to your commands and that you are always in control.

Take advantage of the FREE Professional Training Support that comes with your Innotek remote trainer purchase.

### Register Your Product:

Your product can be registered on our website at [www.innotek.net](http://www.innotek.net)

### Troubleshooting

If the collar appears not to be working, try the following:

- Adjust the collar strap to fit.
- Test the receiver with the test light. If no light, replace the battery.
- If the transmitter LED is out, replace the transmitter battery.
- Rematch the components as shown in the Quick Start Guide.
- Check that the probes are tightened and are the correct spacing.
- Ensure that the probes are touching the dog's skin.
- If necessary, trim the dog's hair to ensure proper skin contact. Never shave the dog's neck.
- Use a stronger stimulation level.

If you cannot solve the problem by following these steps, please call 1-800-826-5527.

### IMPORTANT ADVICE

1. Read the complete manual and follow all directions. If you have any questions, please call 1-800-826-5527.
2. This device is intended for use only on dogs. Never attempt to use it for any purpose not described in this manual.
3. Never perform set-up procedures while the collar is on your dog.

4. Any collar worn for extended periods can cause a condition similar to bedsores, known as Pressure Necrosis. To reduce the possibility, you must do the following:

- Never leave the collar on the dog for more than 12 consecutive hours.
- Examine the dog's neck daily for any signs of a rash or a sore.
- Supervise your dog during the first 2 days of training.
- Check the fit to prevent excessive pressure; you should be able to insert one finger between the collar strap and your dog's skin.
- Wash the dog's neck area and the probes of the collar weekly with a wash cloth.
- If the condition persists beyond 24 hours, see your veterinarian.

5. Do not attempt to dismantle or repair any components of this system; doing so will void the warranty in full. The computerized circuitry should be serviced only by an authorized expert.

6. Realize that because dogs have unique temperaments, there is no way of knowing how your dog will react to the introduction of a training collar system. For the safety of your dog, a long lead should be used during initial training so you have control of the situation.

7. If you have reason to believe that your dog may pose a danger to others, harm itself, or react adversely to the collar, do not rely solely on this product to train your dog. If your dog shows signs of growling, snarling or biting while using the collar, stop immediately. Aggression in dogs has many causes. We recommend that you consult a knowledgeable professional dog trainer or animal behaviorist with experience with aggressive dogs if your dog has shown any of these characteristics.

8. Occasionally, a dog cannot be trained to respond to a training collar. Sometimes even a properly trained dog may disobey a command. Therefore, Invisible Technologies, its distributors, and dealers cannot guarantee that the system will in all cases keep the customer's animal from disobeying commands.

### FREE Professional Training Support

Additional behavior or training issues? Looking for the best way to get a well-behaved dog? Just call our **FREE** Professional Training Support hotline at 800-364-3362 and speak with the professionals at Dogstar Training.

Visit [www.partnersinbehavior.com](http://www.partnersinbehavior.com)



**Invisible Technologies, Inc.**  
**1-800-826-5527**  
**[www.innotek.net](http://www.innotek.net)**

Innotek, the Innotek logo, and Free Spirit are registered trademarks of Invisible Technologies, Inc. All other product and service names are the property of their respective owners.

© 2004, Invisible Technologies, Inc.  
All rights reserved