



UplandHunter™ SD-1850 Operating Guide

Please read this entire guide before beginning



Thank you for choosing SportDOG Brand™. Used properly, this product will help you train your dog efficiently and safely. To ensure your satisfaction, please review this owner's manual thoroughly. If you have questions regarding this product's operation, please see this manual's Frequently Asked Questions or Troubleshooting section, contact our Customer Care Center at 1-800-732-0144, or visit our website at www.sportdogbrand.com.

Table of Contents

Components	3
How the System Works	3
Key Definitions - Remote Transmitter	4
Key Definitions - Collar Receiver	5
Key Definitions - Remote Beeper	5
Prepare the Remote Transmitter.....	6
Prepare the Collar Receiver.....	7
Prepare the Remote Beeper	9
Fit the UplandHunter™ 1850 to Your Dog	10
Find the Best Intensity Level for Your Dog	12
Program the Remote Beeper	13
Reset the Collar Receiver	14
Reset the Remote Beeper	14
Program the Collar Receiver for Two-Dog Operation	15
Program the Remote Beeper for Two-Dog Operation	15
Frequently Asked Questions	16
Troubleshooting.....	18
Test Light Instructions	19
Terms of Use and Limitation of Liability	19
SportDOG Add-A-Dog® Receivers	20

Components



How the System Works

The SportDOG UplandHunter™ 1850 has been proven safe, comfortable and effective for all dogs over 8 pounds. This is a dual-purpose system:

1. Consistent, correct use of the remote trainer feature allows you to reinforce commands and correct misbehavior from up to $\frac{3}{4}$ mile.
2. The beeper feature provides an audible tone that allows you to keep track of your dog's position, even when you can't see him.

The Remote Transmitter controls both of these functions, providing unmatched convenience and versatility. Like all SportDOG remote trainers, the SD-1850 features adjustable stimulation levels so you can tailor the correction to your dog's temperament without the risk of over-correction.

Important: The SD-1850 Remote Transmitter can control the Collar Receiver from up to $\frac{3}{4}$ mile and the Remote Beeper from up to 500 yards. For consistent results, hold the Remote Transmitter in a vertical position away from your body and over your head. Terrain, weather, vegetation, transmission from other radio devices, and other factors will affect the maximum range.



Key Definitions - Remote Transmitter

Remote Transmitter: Transmits the radio signal to the Collar Receiver and Remote Beeper. It is waterproof and can be submerged in water.

Intensity Dial: Provides multiple levels of stimulation so you can match the correction to your dog's temperament.

Transmitter Indicator Light: Indicates that a button is pressed and also serves as a low-battery indicator.

Toggle Switch: This switch is pre-set so that the Remote Transmitter can control two Collar Receivers and two Remote Beepers.

Upper Button: Delivers "continuous" stimulation. You control when and how long stimulation is delivered to your dog through the Collar Receiver's Contact Points. When this button is pressed for longer than 8 seconds, the Collar Receiver will "time out." The button has to be released and then pressed again before additional stimulation can be delivered.

Lower Button: Delivers momentary ("nick") stimulation (about 5/100 second) no matter how long the button is pressed.

Locate Button: Pressing and releasing this button produces a single beep from the Remote Beeper and disables the Remote Beeper functions.

Run Mode Button. Pressing and holding this button changes the Remote Beeper's Run Mode, which is indicated on the back of the Remote Transmitter. Pressing this button also reactivates the Remote Beeper functions after they have been disabled by the Locate Button.


Run Mode Indicators: When the Run Mode Button is held, an indicator light will rotate through the Remote Beeper's three Run Mode options (refer to page 14):

1. Silent – No beep when dog is running/Beeps once per second when dog is on point.
2. 5 Second – Beeps every 5 seconds when dog is running/Beeps once per second when dog is on point.
3. 10 Second – Beeps every 10 seconds when dog is running/Beeps once per second when dog is on point.

Tone Mode Button: This recessed button allows you to choose from 9 different Remote Beeper sounds (refer to page 13).

Charging Jack: For connecting the charger. Although the Remote Transmitter is waterproof without the rubber cover, keep the cover in place when not charging to keep debris out of the opening.

Remote Transmitter

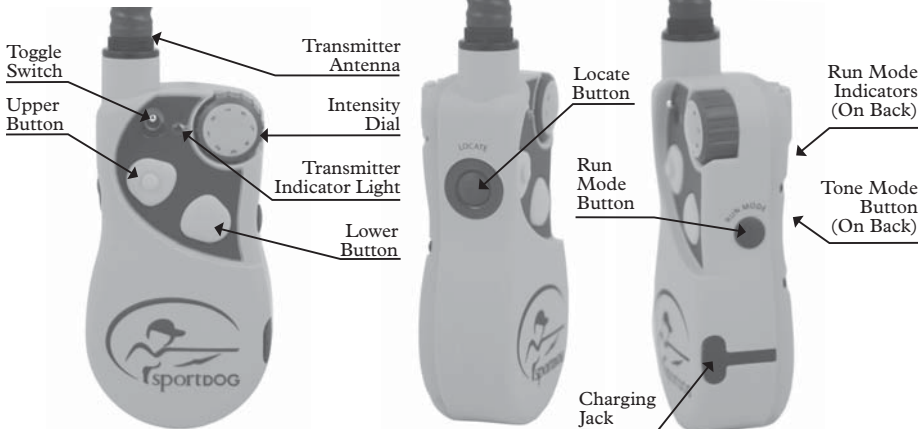

Key Definitions - Collar Receiver

Collar Receiver: Receives the radio signal from the Remote Transmitter and delivers the stimulation for correctioning your dog. It is waterproof and can be submerged in water.


Receiver Indicator Light: Indicates when the Collar Receiver has been turned on or off and also serves as a low-battery indicator.

Contact Points: The contacts through which the Collar Receiver delivers stimulation when the Remote Transmitter's upper or lower button is pressed.

On/Off Button: Turns the Collar Receiver on and off.

Charging Jack (With Cover): For connecting the charger. Although the Collar Receiver is waterproof without the rubber cover, keep the cover in place when not charging to keep debris out of the opening.

Collar Receiver

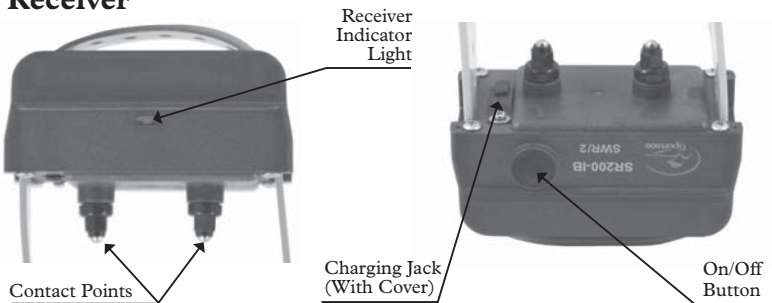

Key Definitions - Remote Beeper

Remote Beeper: Receives the radio signal from the Remote Transmitter and beeps with a tone and frequency set by the user. It is waterproof and can be submerged in water.


On/Off Button: Turns the beeper on and off. The Remote Beeper functions can be disabled from the Remote Transmitter, but the Remote Beeper should be turned off using this button when not in use to conserve battery life.

Indicator Light: Verifies that Remote Beeper is functioning and also serves as a low-battery indicator.

Beeper Speaker: The point at which the sound is produced.

Battery Compartment: Holds the Remote Beeper's 3-volt lithium battery.

Remote Beeper

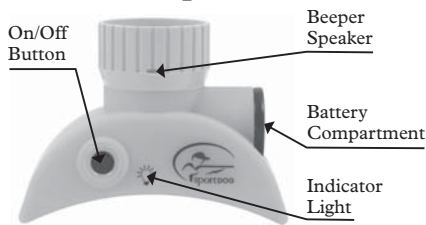

Step 1 Prepare the Remote Transmitter


1

Charge the Remote Transmitter

1. Lift the rubber cover protecting the Charging Jack.
2. Connect one of the charger connectors to the Charging Jack.
3. Plug the charger into a standard 110-volt AC wall outlet.
4. Charge the Remote Transmitter for 24 hours for the first charge. Recharges take only 12 hours.

Note: The Transmitter Indicator Light will flash after 12 hours of charging. For the first charge, continue to charge the Remote Transmitter for an additional 12 hours.

5. When charging is complete, replace the rubber cover.

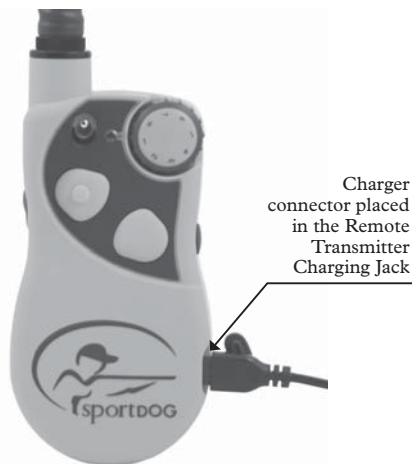

Note: Approximate battery life between charges is 40 to 60 hours, depending on frequency of use.

Transmitter Indicator Light

Remote Transmitter Function	Indicator Light Response
Continuous Stimulation, Locate, or Run Mode button pressed	Solid in color
Momentary (Nick) Stimulation button pressed	Single flash
Low battery – Continuous Stimulation, Locate, or Run Mode button pressed	Flashes continuously

Step 2 Prepare the Collar Receiver

Charge the Collar Receiver


1. Lift the rubber cover protecting the Charging Jack.
2. Connect the charger connector to the Charging Jack.
3. Plug the charger into a standard 110-volt AC wall outlet.
4. Charge the Collar Receiver for 24 hours for the first charge. Recharges take only 12 hours.

Note: The Receiver Indicator Light will flash after 12 hours of charging. For the first charge, continue to charge the Collar Receiver for an additional 12 hours.

5. When charging is completed, replace the rubber cover.

If the Collar Receiver is used in or around salt water, the Collar Receiver should be rinsed with fresh water following each use. Prior to rinsing, the rubber Charging Jack cover should be removed. Replace it after the Collar Receiver has air-dried.

Charger connector placed in Collar Receiver Charging Jack

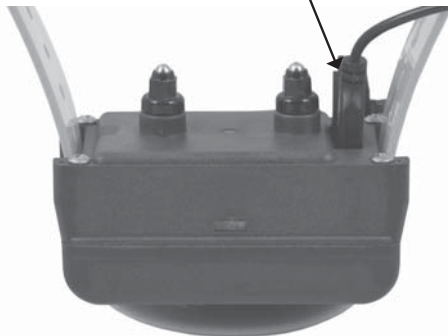

To Turn the Collar Receiver On:

1. Press and hold the On/Off Button until the Receiver Indicator Light comes on and the Collar Receiver beeps 5 times.
2. Release the On/Off Button.

The Receiver Indicator Light will flash until the Collar Receiver is turned off. The flashing light indicates the Collar Receiver is ready to receive a radio signal from the Remote Transmitter.



On/Off Button

To Turn the Collar Receiver Off:

1. Press and hold the On/Off Button until the Receiver Indicator Light comes on and the Collar Receiver beeps 2 times.
2. Release the On/Off Button.

To extend the life between charging cycles, turn the Collar Receiver off when it is not in use. Approximate battery life between charges is 40 to 80 hours, depending on frequency of use.

Receiver Indicator Light

Collar Receiver Function	Indicator Light Response
Collar Receiver on – good battery	Flashes once per second
Collar Receiver on - low battery	Flashes once every 4 seconds
Continuous Stimulation button pressed	Solid in color
Momentary (Nick) Stimulation button pressed	Single flash

Important Notes About Rechargeable Batteries

- This section applies to both the Remote Transmitter and Collar Receiver
- The rechargeable Nickel Metal Hydride (NiMH) batteries are not memory sensitive and do not require depletion before charging.
- The batteries come partially charged from the factory, but will require a full charge (24 hours) before the first use.
- Remember - Always keep batteries away from flame.
- When storing the unit for long periods, remember to regularly give batteries a full charge (12 hours). This should be done once every 4 to 6 weeks.
- Excessive overcharging can shorten battery life.
- If your equipment has not been charged for an extended period, you may experience a decrease in battery life the first few uses. Afterwards, the battery life will return to previous capacity levels.
- You should expect hundreds of recharge cycles from your batteries. However, all rechargeable batteries lose capacity over time relative to the number of recharge cycles they experience. This is normal. If your operating time drops to half of the original life, contact the Customer Care Center to purchase a new battery.
- The batteries should last for a period of 3-5 years. When a battery needs replacement, you can order a new pack by calling our Customer Care Center at 1-800-732-0144. Please do not open the Collar Receiver or Remote Transmitter until you have received the replacement.

Step 3 Prepare the Remote Beeper

3

Insert the Battery

1. Remove the battery cover.
2. Insert the CR-123 3-volt lithium battery with the positive (+) end facing outward.
3. Replace the battery cover.



To Turn the Remote Beeper On:

1. Press and hold the On/Off Button until the Remote Beeper's Indicator Light comes on and the Remote Beeper beeps 1 time.
2. Release the On/Off Button.

The Remote Beeper's Indicator Light will flash until the Remote Beeper is turned off. The flashing light indicates the Remote Beeper is ready to receive a radio signal from the Remote Transmitter.

To Turn the Remote Beeper Off:

1. Press and hold the On/Off Button until the Remote Beeper's Indicator Light comes on and the Remote Beeper beeps 2 times.
2. Release the On/Off Button.

Note: The Remote Beeper will provide approximately 100 hours of "on" time depending on how frequently the beeper function is activated and depending on which Tone Mode the Remote Beeper is set to.

Beeper Indicator Light

Remote Beeper Function	Indicator Light Response
Remote Beeper On – Good Battery	Flashes twice every second
Remote Beeper On – Low Battery	Flashes once every second

Step 4 Fit the UplandHunter™ 1850 to Your Dog

4

This system is designed so you can add or remove the Remote Beeper to or from the collar strap as needed.

To Place the Remote Beeper on the Collar Strap:

1. Press the green rubber saddle into the opening at the bottom of the beeper.
2. Thread the end of the collar strap through the slot in the beeper. Continue sliding it through the slot in the saddle and then through the slots on the opposite side of the saddle and beeper.
3. Slide the saddle and Remote Beeper a few more inches up the Collar Strap.

Note: The saddle creates a very snug fit for the Remote Beeper. This snug fit is intentional to keep the Remote Beeper from sliding on the strap.



To Place the Entire System on Your Dog

1. With your dog standing, place the Collar Strap around the narrowest part of your dog's neck.
2. Ideally, the Collar Receiver should be centered at the front of the dog's neck and the Remote Beeper should be centered behind the dog's head. Slide the Remote Beeper as needed to position it properly.
3. The Collar Strap should fit snugly, yet be loose enough to allow one finger to fit between the strap and your dog's neck.
4. Allow your dog to wear the collar for several minutes, and then recheck the fit.

Remote
Beeper
Location

Collar
Receiver
Location



Note: The Remote Beeper can be used on the collar strap without the Collar Receiver. To remove the Collar Receiver, simply slide the saddle and Remote Beeper off of the strap, and then do the same with the Collar Receiver. Replace the saddle and Remote Beeper. The Remote Beeper, without the Collar Receiver, may shift due to movement.

Step 5 Find the Best Intensity Level for Your Dog

The UplandHunter™ 1850 has multiple intensity levels. This allows you to choose the stimulation that is best for your dog.

Note: Always start at the lowest level and work your way up.

For training efficiency, it is important to find the right intensity level for your dog. This is called the Recognition Level, at which your dog looks around in curiosity, or flicks his ears.

Finding Your Dog's Recognition Level:

Note: Every dog is different and you cannot predict where your dog's Recognition Level will be. Watch closely for any slight change in behavior that tells you your dog is feeling the stimulation.

1. With the Collar Receiver turned on and properly fitted to your dog, set the Remote Transmitter's Intensity Dial at Level 1 and press the Continuous Stimulation Button for 1 to 2 seconds.
2. If your dog shows no reaction to Level 1, go to Level 2 and repeat the process.
3. **YOUR DOG SHOULD NOT VOCALIZE OR PANIC WHEN RECEIVING STIMULATION. IF THIS HAPPENS, THE STIMULATION LEVEL IS TOO HIGH AND YOU NEED TO GO BACK TO THE PREVIOUS LEVEL AND REPEAT THE PROCESS.**
4. Once you find your dog's Recognition Level, this is the level you should use when you begin a training exercise.
5. If you have progressed to Level 8 while searching for your dog's Recognition Level and your dog continues to show no response, check to see if Collar Receiver is snug against your dog's neck. Then go back to Intensity Level 1 and repeat the process. If your dog still does not indicate he is feeling the stimulation, you may have to trim the hair beneath the Contact Points.

If after completing all of these steps your dog still does not indicate he is feeling the stimulation, please contact Customer Care Center at 1-800-732-0144.

General Training Tips

Now you are ready to use the UplandHunter™ 1850 and begin training your dog. Please keep the following training tips in mind.

- Eliminate one misbehavior or teach one obedience command at a time. If you move too fast with the training, your dog may become confused.
- Be consistent. Give your dog a tone and/or stimulation with each misbehavior.
- Do not overcorrect your dog. Use as few stimulations as possible to train your dog.
- Restrict your dog from situations in which he has a history of misbehaving unless you can supervise him and use the UplandHunter™ 1850 for applying tone or stimulation.
- If you notice one situation in which your dog misbehaves repeatedly, set up this situation as a training session. This will dramatically increase your chances of success.
- If your dog has a timid reaction to the tone or stimulation (especially the first couple of times), do not be alarmed. Redirect his attention to a simple and appropriate behavior (i.e. a known command, such as "Sit").
- Never use the UplandHunter™ 1850 to correct or eliminate any form of aggressive behavior. If your dog exhibits such behavior, contact a professional trainer. Aggression in dogs is the result of many factors – it may be a learned behavior or it may be brought on as a result of fear. Another factor contributing to aggression in dogs is social dominance. Every dog is different.

Step 6 Program the Remote Beeper


The Remote Beeper is programmable for two settings:

- 1. How often it beeps (Run Mode).** The Run Mode is changed using the Run Mode button on the Remote Transmitter. You have three choices of how often the beeper sounds off when your dog is moving: Never (Silent Mode), every 5 seconds (5 Second Mode) or every 10 seconds (10 Second Mode). In all modes, the Remote Beeper beeps once per second when the dog stops moving.
- 2. What sound it makes (Tone Mode).** The Tone Mode is changed using the recessed Tone Mode Button on the back of the Remote Transmitter. There are 9 tones to choose from, indicated in the chart below.

Note: The Remote Beeper is factory-set to Tone Mode 1 (Low Volume Hawk).

To Change the Tone Mode:

1. Turn on the Remote Beeper. The flashing light indicates it is on.
2. With a pen or paper clip, press recessed Tone Mode button located in the center of the back of the Remote Transmitter. Once pressed, the Remote Beeper will beep once.
3. The Remote Beeper will then begin to cycle through the various tones. After the desired tone sounds, press the Tone Mode button again and the Remote Beeper will beep five times, indicating that it has been programmed for the new sound.

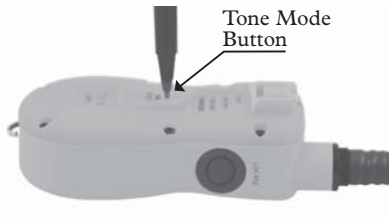

MODE	TONE
1	Low Volume Hawk
2	High Volume Hawk
3	Bobwhite Quail Call
4	Triple Beep
5	Low Volume Beep
6	High Volume Beep
7	Double High Volume Beep
8	High Falling to Low Volume
9	Double High Falling to Low Volume

To Change the Run Mode:

1. Press and hold the Run Mode button while viewing the back of the Remote Transmitter.
2. After 2 to 3 seconds, an indicator light next to the current run mode will light up.
3. Continue holding the Run Mode button until the indicator light for the desired mode lights up.
4. Release the Run Mode button. The Indicator Light next to the corresponding mode will flash several times indicating the new mode is set.



In the Field

Anytime your dog is within 500 yards, you can make the Remote Beeper beep by pressing the Locate Button on the Remote Transmitter. The Remote Beeper will beep once each time you press the button. Pressing the Locate Button disables the Remote Beeper's functions, but it is still on. To reactivate the functions, press the Remote Transmitter's Run Mode button. The Remote Beeper will continue operating in the last mode in which it was set.

Note: Maximum range may vary. See important statement at the bottom of Page 3.

Step 7 Reset the Collar Receiver

To reset the Collar Receiver to work with a new Remote Transmitter or to reprogram a new Collar Receiver to work with your existing Remote Transmitter:

- A. Turn the Collar Receiver off.
- B. Press and hold the On/Off Button. The Receiver Indicator Light will come on, then turn off after 4-5 seconds. If the On/Off Button is released too early, the Receiver Indicator Light will begin flashing as normal. If this occurs, start over and repeat from A.
- C. After the Receiver Indicator Light has turned off, release the On/Off Button.
- D. Press and hold the Upper Button on the Remote Transmitter until the Receiver Indicator Light flashes 5 times. You may need to hold both units 2-3 feet from each other before this occurs. Once the Receiver Indicator Light has flashed 5 times, the Collar Receiver has been reset and will begin flashing as normal. If the Receiver Indicator Light does not flash 5 times, start over and repeat from A.

Step 8 Reset the Remote Beeper

To reset the Remote Beeper to work with a new Remote Transmitter or to reprogram a new Remote Beeper to work with your existing Remote Transmitter:

- A. Turn the Remote Beeper off.
- B. Press and hold the On/Off Button. The Remote Beeper's Indicator Light will come on, then turn off after 4-5 seconds. If the On/Off Button is released too early, the Remote Beeper's Indicator Light will begin flashing as normal. If this occurs, start over and repeat from A.

- C. After the Remote Beeper's Indicator Light has turned off, release the On/Off Button.
- D. Press and hold the Locate Button on the Remote Transmitter until the Remote Beeper's Indicator Light flashes 5 times. You may need to hold both units 2-3 feet from each other before this occurs. Once the Remote Beeper's Indicator Light has flashed 5 times, the Remote Beeper has been reset and will begin flashing as normal. If the Remote Beeper's Indicator Light does not flash 5 times, start over and repeat from A.

Step 9 Program the Collar Receiver for Two-Dog Operation

SportDOG Collar Receivers can be set to respond to either the up or down toggle switch position. A SportDOG Add-A-Dog® receiver must be purchased to train a second dog in two-dog mode.

1. Flip the toggle switch **up** to the orange position to program the first Collar Receiver.
 - A. Turn the Collar Receiver off.
 - B. Press and hold the On/Off Button. The Receiver Indicator Light will come on, then turn off in 4-5 seconds. If the On/Off Button is released too early, the Receiver Indicator Light will begin its normal flashing. If this occurs, start over and repeat from A.
 - C. After the Receiver Indicator Light has turned off, release the On/Off Button.
 - D. Press and hold the Upper Button on the Remote Transmitter until the Receiver Indicator Light flashes 5 times. *Note: In mode 6, press and release the Upper Button repetitively until the Receiver Indicator Light flashes 5 times.* You may need to hold both units 2-3 feet from each other. If the Receiver Indicator Light does not flash 5 times, start over and repeat from A.
2. Program the second Collar Receiver the same way using A. through D. above, but with the toggle switch **down** to the black position.

Toggle set to Orange/Top for Dog 1 or Toggle set to Black/Bottom for Dog 2



Step 10 Program the Remote Beeper for Two-Dog Operation

A SportDOG UplandHunter™ Add-A-Dog® (SDR-BEEP) or SportDOG Accessory Beeper (SD-AB) must be purchased to train a second dog.

1. Flip the toggle switch on the Remote Transmitter to the up position.
2. Program the first Remote Beeper as follows:
 - A. Turn the Remote Beeper off.
 - B. Press and hold the On/Off Button. The Remote Beeper's Indicator Light will come on, then turn off in 4-5 seconds. If the On/Off Button is released too early, the Remote Beeper Indicator Light will begin flashing. If this occurs, start over.
 - C. After the Remote Beeper Indicator Light has turned off, release the On/Off Button.

- D.** Press and hold the Locate Button on the Remote Transmitter until the Remote Beeper's Indicator Light flashes five times. (You may need to hold the units a few feet apart while doing this.) If the Remote Beeper Indicator Light does not flash 5 times, start over.
3. Program the second Remote Beeper the same way using **A.** through **D.** from step 2 but with the toggle switch in the **down** position.

Frequently Asked Questions

Is the stimulation safe for my dog?	While the stimulation is unpleasant, it is harmless to your dog. Electronic training devices require interaction and training from the owner to achieve desired results.
How old does a dog have to be before using the UplandHunter™ 1850?	Your dog should be able to learn basic obedience commands such as “Sit” or “Stay.” The Collar Receiver may be too large for dogs under 8 pounds.
Once my dog is trained and has been obeying my commands, will my dog have to continue to wear the Collar Receiver?	Your dog may need to wear the Collar Receiver from time to time for reinforcement. Also, many hunters keep the Collar Receiver on their dogs while hunting for maximum control.
Is the Collar Receiver waterproof?	Yes. When changing the battery, make sure the o-ring is free from dirt and debris and in its correct position.
Can I use the UplandHunter™ 1850 with more than one dog?	Yes, SportDOG UplandHunter™ Add-A-Dog® system (SDR-BEEP) must be purchased. The Remote Transmitter is compatible with all, SportDOG Add-A-Dog® Collar Receivers. Please refer to back cover for a list of compatible Collar Receivers.
Can I use the UplandHunter™ 1850 on aggressive dogs?	We do not recommend any of our products to be used on aggressive dogs. We recommend you contact your local veterinarian or professional trainer to determine if your dog might be aggressive.
Will I get exactly 3/4 mile of range with the UplandHunter™ 1850?	The 3/4 mile range you get with your UplandHunter™ 1850 is with the Collar Receiver. This range will vary according to terrain, weather, vegetation, as well as transmission from other radio devices. To get the maximum amount of range, please refer to “How the System Works” section of this guide.
What is the range of the UplandHunter™ 1850 Remote Beeper?	The range you get with your UplandHunter™ 1850 Remote Beeper is 500 yards. This range will vary according to terrain, weather, vegetation, as well as transmission from other radio devices. To get the maximum amount of range, please refer to “How the System Works” section of this guide.

How long can I continuously deliver stimulation to my dog?	The maximum amount of time you can press the Continuous Stimulation Button and deliver stimulation to your dog continuously is 8 seconds. After eight seconds, the Remote Transmitter will time-out, and the Continuous Stimulation Button must be released and pressed again.
What do I do if my dog's neck becomes red and irritated?	This condition is due to the Contact Points irritating the skin. Discontinue use of the Collar Receiver for a few days. If the condition persists beyond 48 hours, see your veterinarian. Once the skin returns to normal, replace Collar Receiver, and monitor the skin condition closely.
Can I use the Remote Beeper by itself?	Yes, the Remote Beeper can be used independently without the Collar Receiver. However, it is recommended to have a counter weight, like the Collar Receiver, in order to keep the Remote Beeper on top of the dog's neck.
Can my Collar Receiver be used around salt water?	If the Collar Receiver is used in or around salt water, the Collar Receiver should be rinsed with fresh water following each use. Prior to rinsing, the rubber Charging Jack cover should be removed. Replace it after the Collar Receiver has air-dried.
The Intensity Dial seems difficult to rotate. Is this normal?	Yes. This prevents accidental changes in intensity and encourages an optimal waterproof seal. The knob will "break in" and be slightly easier to turn as you use it.


Note: For additional information and FAQ's, please visit www.sportdogbrand.com.

Troubleshooting

The answers to these questions should help you solve any problem you have with this system. If they do not, please contact the Customer Care Center at 1-800-732-0144 or visit our website at www.sportdogbrand.com.

<p>My dog is not responding when I press a button.</p>	<ul style="list-style-type: none"> • Check to see if the Collar Receiver has been turned on. • If your range has reduced from the first time you have used it, please check to see if the battery is low in either the Remote Transmitter or Collar Receiver. • Many factors can impact the range you have with the UplandHunter™ 1850. For a list of these factors, please refer to “How the System Works”. • You can verify the Collar Receiver is delivering stimulation to your dog by placing the test light, enclosed in your kit, on the Collar Receiver. Please refer to the “Test Light Instructions” for details. • Increase the Intensity Dial. Refer to “Find the Best intensity level For Your Dog” for more information. • Make sure the Collar Receiver’s Contact Points are placed snugly against your dog’s skin. Refer to “Fit the UplandHunter™ 1850 to Your Dog” for more information. • If you notice your operating time dropping to about half the original time, your Collar Receiver battery needs to be replaced. Contact the Customer Care Center to purchase a new one.
<p>My remote beeper does not beep when the dog is moving or when he is on point.</p>	<ul style="list-style-type: none"> • Check to see if the Remote Beeper has been turned on. • If the Locate button was pressed, then this will disable the beeper functions of the Remote Beeper. • To enable the beeper functions, press and release the run mode button. The Remote Beeper should double beep to confirm receipt of signal.
<p>The Collar Receiver will not turn on.</p>	<ul style="list-style-type: none"> • Make sure the Collar Receiver has been charged. For the initial charge, be sure to charge it for 24 hours. Future charges only take 12 hours.
<p>The Collar Receiver is not responding to the Remote Transmitter.</p>	<ul style="list-style-type: none"> • Verify the Collar Receiver has been turned on. Refer to “Turning the Collar Receiver On and Off”. • Refer to “Reset the Collar Receiver.”
<p>The Remote Beeper is not responding to the Remote Transmitter.</p>	<ul style="list-style-type: none"> • Verify the Remote Beeper has been turned on. Refer to “Turning the Remote Beeper On and Off”. • Refer to “Reset the Remote Beeper.”
<p>My remote beeper cannot be reset.</p>	<ul style="list-style-type: none"> • Verify the Remote Beeper has been turned on. Refer to “Turning the Remote Beeper On and Off”. • Refer to “Reset the Remote Beeper.” <p><i>Note: Only the Locate button can program/reset the Remote Beeper.</i></p>

Test Light Instructions

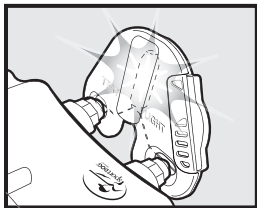

1. Turn the Collar Receiver on.
2. Hold the Test Light Contacts to the Contact Points.
3. Press a Stimulation Button on the Remote Transmitter.
4. The Test Light will flash.

Note: At higher Stimulation Levels, the Test Light will flash brighter.

5. Turn the Collar Receiver off.

Save the Test Light for future testing.

Note: If the Test Light does not flash, recharge the battery and re-test. If Test Light still does not flash, contact the Customer Care Center at 1-800-732-0144.

Terms of Use and Limitation of Liability

1. Terms of Use

This Product is offered to you conditioned upon your acceptance without modification of the terms, conditions and notices contained herein. Usage of this product implies acceptance of all such terms, conditions, and notices.

2. Proper Use

This Product is designed for use with dogs where training is desired. The specific temperament of your dog may not work with this product. We recommend that you not use this product if your dog is less than 8 pounds or if your dog is aggressive. If you are unsure whether this is appropriate for your dog, please consult your veterinarian, certified trainer or contact our Customer Care Center at 1-800-732-0144.

Proper use includes reviewing the entire Operating and Training Guide provided with your product and any specific Caution statements.

3. No Unlawful or Prohibited Use

This Product is designed for use with dogs only. This dog training device is not intended to harm, injure, or provoke. Using this product in a way that is not intended could result in violation of Federal, State or local laws.

4. Limitation of Liability

In no event shall Radio Systems Corporation be liable for any direct, indirect, punitive, incidental, special or consequential damages, or any damages whatsoever arising out of or connected with the use or misuse of this Product. Buyer assumes all risks and liability from the use of this Product.

5. Modification of Terms and Conditions

Radio Systems Corporation reserves the right to change the terms, conditions and notices under which this Product is offered.

FCC COMPLIANCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. Unauthorized changes or modifications to the equipment that are not approved by Radio Systems Corporation are in violation of FCC regulations and could void the user's authority to operate the equipment and void the warranty.

SportDog Add-A-Dog® Receivers

Note: The UplandHunter™ Transmitter can be used with any SportDOG Add-A-Dog® Receiver.

Description	Part Number
FieldTrainer™ Add-A-Dog - Standard Power	SDR-FS
FieldTrainer™ Add-A-Dog - High Power	SDR-FH
HoundHunter™ Add-A-Dog- High Power	SDR-H
SportHunter® Add-A-Dog - Standard Power	SDR
WetlandHunter™ Add-A-Dog - High Power	SDR-CH
WetlandHunter™ Add-A-Dog - High Power	SDR-FC

SportDog UplandHunter™ Accessories

UplandHunter™ Remote Beeper Accessory	SD-AB
UplandHunter™ Add-A-Dog - Low Power	SDR-BEEP (Comes with both Collar Receiver and Remote Beeper)

Radio Systems Corporation
10427 Electric Avenue
Knoxville, TN 37932
1-800-732-0144
www.sportdogbrand.com
400-822/1
Protected by Patent #7,017,524