

Switching the Collar On

Remove the magnet from the end cap. The transmitter will then turn on (there may be a 3-6 second delay). The collar will normally transmit one beep per second.



Switching the Collar Off

Place magnet on the end cap of transmitter. Use receiver to check and make sure collar is off.

*Make sure the magnet is seated firmly into the end cap.



When the batteries in the collar get low, the collar will transmit eight rapid beeps followed by one normal beep, repeatedly.

Replacing Batteries

First, remove the end cap and replace **both** old batteries with new **3.6 V AA Lithium batteries.** Make sure the batteries are installed properly with the polarities matching the + and - indicators on the collar. Place end cap back onto transmitter and check with receiver to make sure collar is working properly.

Note: New 3.6 V lithium batteries may require a few seconds to become activated when placed in your collar. You may also hear the low battery warning for the first 10-20 seconds.


Available Collar Features:

Bark Indicator

The Bark Indicator is activated when your animal is barking. The collar's signal will rapidly double-beep when triggered.

Tree Switch or Point Mode (Motion Sensor)

The Tree Switch is activated when your animal has treed and the Point Mode is activated when your animal stops moving (or goes on point). For either feature the collar's signal will beep twice as fast as normal when triggered. If your collar has a Tree Switch, see illustration below for correct collar placement.

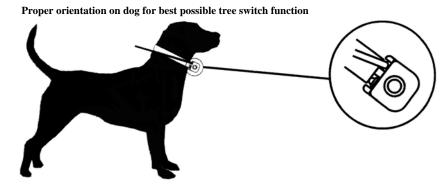

Note that the screw on the end cap is pointing toward the dog's right side.

If you have any questions, or need assistance, please contact Tracker at 1-800-900-2113 or visit www.trackerradio.com