


  
**TRACKER®**  
**Strike User Guide**

**Switching the Collar On**

Remove the magnet from between the bottom of the transmitter and the collar strap. The red light located near the antenna will begin blinking.

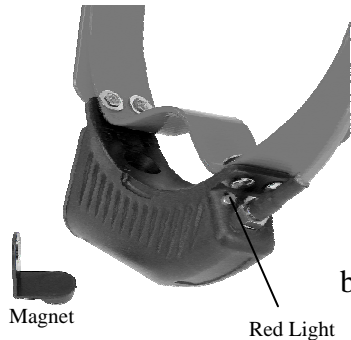

**Switching the Collar Off**

Place the magnet in the groove on the bottom of the transmitter, under the collar strap. The red light will stop blinking.

**Replacing the Battery**

First, use a screwdriver to unscrew the transmitter's end cap. Replace the used battery with a new **3.6VAA Lithium Battery**. Make sure the negative end of the battery (the flat end) is facing out, toward the end cap. Screw the end cap back into place and check to make sure red light is blinking.



**Available Collar Features:**

**Tree Switch or Point Mode (Motion Sensor)**

The Tree Switch is activated when your animal has treed and the Point Mode is activated when your animal stops moving (or goes on point). For either feature the collar's signal will beep twice as fast as normal when triggered. If your collar has a Tree Switch, see illustration below for correct collar placement.

Proper orientation on dog for best possible tree switch function



Note that the antenna is pointing toward the dog's left side.

**For Longer Range**

For longer range, use two 3.6 V ½ AA Lithium Batteries. This will increase the range, but will reduce the battery life.

**If you have any questions, or need assistance, please contact Tracker at 1-800-900-2113 or visit [www.trackerradio.com](http://www.trackerradio.com)**