



## **Supra Lite User Guide**



### **Switching the Collar On**

Place the **3 V Lithium** battery into the transmitter with the negative end (the flat end) facing out. Screw the end cap onto the transmitter and firmly tighten with a coin. Turn on your receiver, to the appropriate frequency, to verify that your collar is transmitting a signal. The signal will normally transmit one beep per second.

### **Switching the Collar Off**

To inactivate collar, remove battery and store separate from transmitter. The end cap may be placed back into the transmitter for safe keeping.

### **Point Mode (Motion Sensor)**

All Supra Lites come with the Point Mode feature. The Point Mode is activated when your animal stops moving (or goes on point). The collar's signal will beep twice as fast as normal when triggered.

**If you have any questions, or need assistance, please contact Tracker at 1-800-900-2113 or visit [www.trackerradio.com](http://www.trackerradio.com)**