


THE
zinger winger




Remote Bird Launcher

User Manual


Models: Uplander

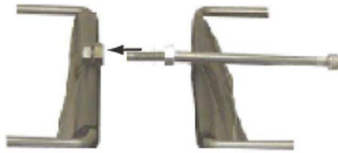

1. Insert the swing arm into the bushing on the pouch arm. Thread the locking nut and tighten. **WARNING:** *Failure to securely tighten this part can result in severe injury.*

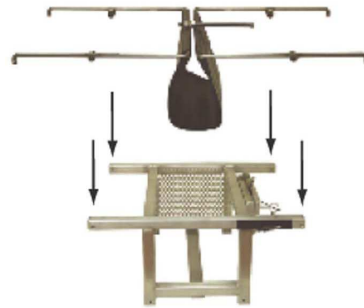


2. Extend the pouch and metal arm assembly in front of you. Position the box frame with perforated screen facing away from you. Drop the pouch into the top opening of box frame.

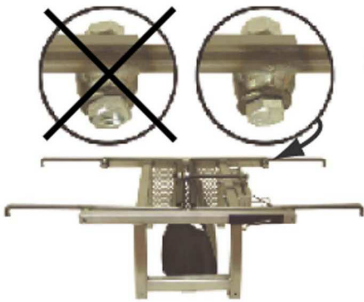

3. Align the metal arm bushings to the box frame holes and install all 4 bolts and lock nuts. Make sure the bolts are facing inside and the nuts are facing outside. Tighten the bolts so that the metal arms still pivot freely. **IMPORTANT:** *Do not over tighten.*




4. Connect the springs one at a time in this sequence. Loop one end of the spring through each end of the metal arm assembly. Repeat with the opposite spring. The springs should be dangling loose. **NOTE:** *This Launcher can be operated using only 2 springs. Using all four springs requires considerable strength to load and reduces spring life due to the extra stress exerted at launch.*

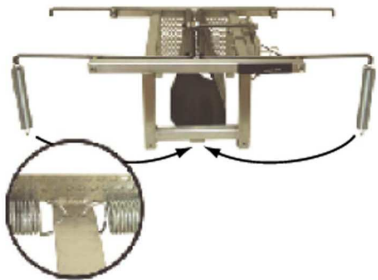


5. The free end of the springs can now be connected thru the holes located on the brace of the box frame. You may need to use pliers or vise grips to loop the spring ends thru the holes.

LOADING

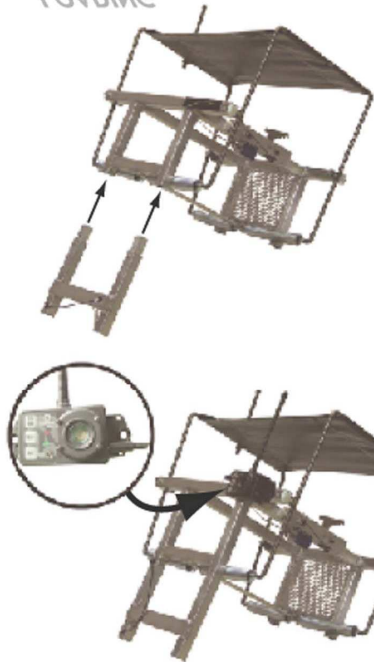

1. An extension leg is provided if you require an angled launch. This can prove valuable in forcing the bird to fly in a predetermined direction. Position the launcher where you want the bird to be released. Insert the extension thru the bottom of the box frame.


2. Insert the retainer pin. The launcher can be loaded with the extension in place.

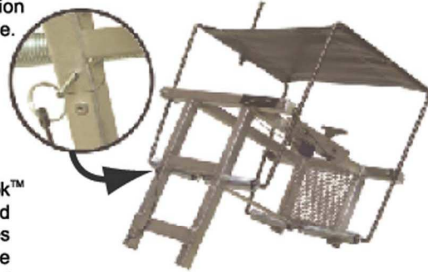


3. Attach the strip of ReceiverLok™ to the back of the receiver and press the two mating surfaces together. Ensure the remote receiver's antenna will not interfere with the metal arms of the launcher when activated. Attach the electronic plug into the receiver. OPTIONAL: The launcher can be operated manually by attaching a pull cord to the trigger and running it under the metal pouch arms.



4. To disengage the spring loaded release arm move the trigger to the left, the release arm will swing up into a ready position. A primer for an attention getting shot can be inserted at this time.

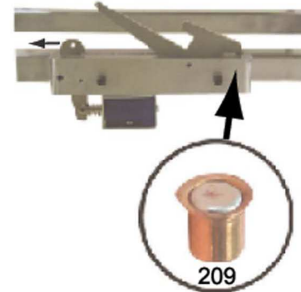

5. Grasp both metal arms and force downward. The pouch will drop into the frame of the launcher as the swing arm engages the release arm. Push downward until you see and hear the trigger and release arm engage each other. **IMPORTANT: Keep your force on the metal arms until you are sure that the launcher is cocked.** Reinstall the safety pin at this time. Quickly step away and remove your arms and hands from the danger zone.

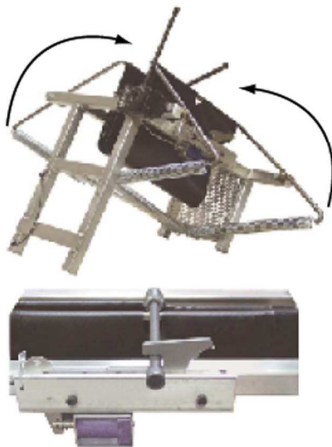

6. Load bird or bumper thru the open end of the box frame. After the bird is inserted the Velcro flaps can be closed to prevent the bird from escaping. The safety pin will need to be removed before you activate the launcher.

