

THE
zinger
winger



**Remote Bird Launcher
Quick Reference
Guide**

Models: Mini-Z, Field Trialer, Hunt Tester

1. HOW TO SET UP



1. Begin by standing the Zinger Winger™ Remote Launcher upright with the leg assembly facing towards you and the intended landing zone.



2. Disengage the gripper clips and swing the legs out from the main body of the Winger.



3. Allow the pouch assembly to hang loose by unhooking the pouch rings from their respective anchor hooks. NOTE: The rubber bands are always crisscrossed when not in use.



4. Lift the "U" frame of the Winger into a full upright position and snap the locking hinges into place.



5. Insert the safety pins into each hinge. Each pin is secured to the Winger by a nylon lanyard and stores on the "U" frame when not in use. If the Winger is missing its safety pins contact the manufacturer for replacement parts. WARNING: Failure to use safety pins can result in the collapse of the "U" frame and cause serious injury to the user.



6. Attach the remote receiver to the Winger, insert the electrical plug and turn on the power. Before proceeding test the release. ATTENTION: Refer to the user manual of your remote control electronics for operating procedures.

2. HOW TO LOAD




1. On uneven surfaces stabilize by pushing down on the Winger to embed the pointed ends into the ground. Place your hand inside the pouch and push down towards the Multishot™ Sound Release.



2. Hook the pouches release bolt to the release arm. The release bolt should be positioned as far over as it can go. **WARNING: The Winger is now considered armed. Extreme care must be taken to prevent accidentally misfiring and injury.**




3. Grasp the rubber above the ring and pull straight down to the anchor hook. For a lesser throw pull to the short anchor hooks; For a greater throw pull to the long anchor hooks. After the lower rubber is hooked up repeat with the top rubber. Place both rings on the same hook. **WARNING: Stretch cord carefully. Uncontrolled release can cause severe injury to unprotected bodily parts, particularly eyes**

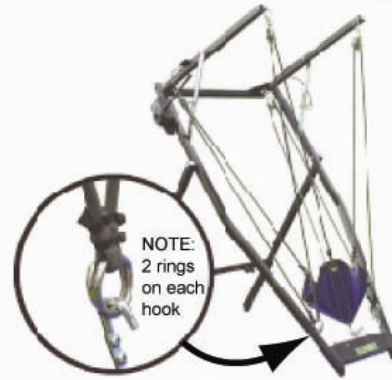

4. Walk around the back of the Winger repeat Step 3. **WARNING: Do not walk in front of the Winger. Serious injury can result if misfire occurs. All four rubbers are now hooked up and the pouch is ready for a bird or bumper.**



5. Standing behind the Winger center the bird or bumper vertically and flat into the pouch. If using a large duck position any overhang on the top end of the pouch so no interference with the frame occurs.

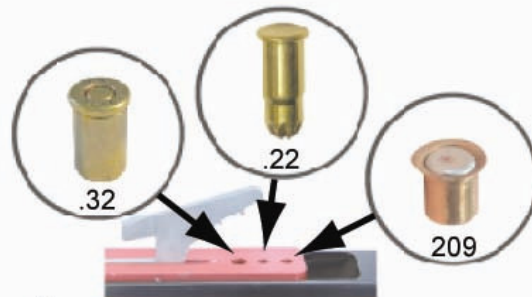

6. **OPTIONAL:** The Multi-Shot™ Sound release mechanism accepts three different blanks for simulating a shot sound. Only one can be used at a time. Choose between a 209 primer, .32 or .22 blank. **WARNING: The shot sound is extremely loud. Hearing and eye protection must be worn when using the Zinger Winger™ to prevent injury to the user.**

3. HOW TO TAKE DOWN



1. Remove the rubbers from the anchor hooks to release tension. Remove the remote receiver from the Winger. **WARNING:** Failure to release rubber tension can result in the "U" frame collapsing in on the user and pinching hands and fingers. Always release rubber tension before taking down Winger



2. Allow the pouch assembly to hang free. Remove safety pins from hinges and replace on "U" frame.



3. Unlock both hinges. **WARNING:** Care must be taken not to pinch hands or fingers when breaking down the hinges.



4. Fold "U" frame onto Winger.



5. Crisscross rubber over to each hook. This will prevent the pulleys from falling off.



6. Fold the leg assembly inward and attach to frame using gripper clips.